

JACK•BOT

- Game Saucer:** Play Poker, Slots, Dice or Keno. Shoot ramp to enable next game. Press "Extra Ball" button rapidly during "Title Screen" to try to cheat.
- Casino Run:** Complete all four games to light "Casino Run". Start Casino Run in Game Saucer. Hit holes to build a Bank of prizes. Use left flipper to collect the Bank. Use right flipper to risk the Bank. Collect the Bank before the timer reaches zero. Bombs end the round.
- Double or Nothing:** From Game Saucer, use left flipper to collect points or the right flipper to play Double or Nothing. Shoot under ramp to double points before the timer reaches zero.
- Multiball:** Complete all lamps in Pin•Bot's chest to open the visor. Shoot both eyes to begin Multiball. Shoot Pin•Bot's eyes and Jack•Bot shots when lit. Shoot Game Saucer to re-light Jack•Bot shots.
- Bonus X:** Hit drop target with moving light to advance Bonus X.
- Keno Arrow:**
- Right Flipper Lane:** Ramp shot returning to Right Flipper Lane awards moving billboard value.

16-10025.3