


PLAYBOARD LOCK


1. PLAYBOARD LOCK SHOWN IN LOCKED POSITION



2. TO UNLOCK PLAYBOARD LIFT LOCK HANDLES AS SHOWN

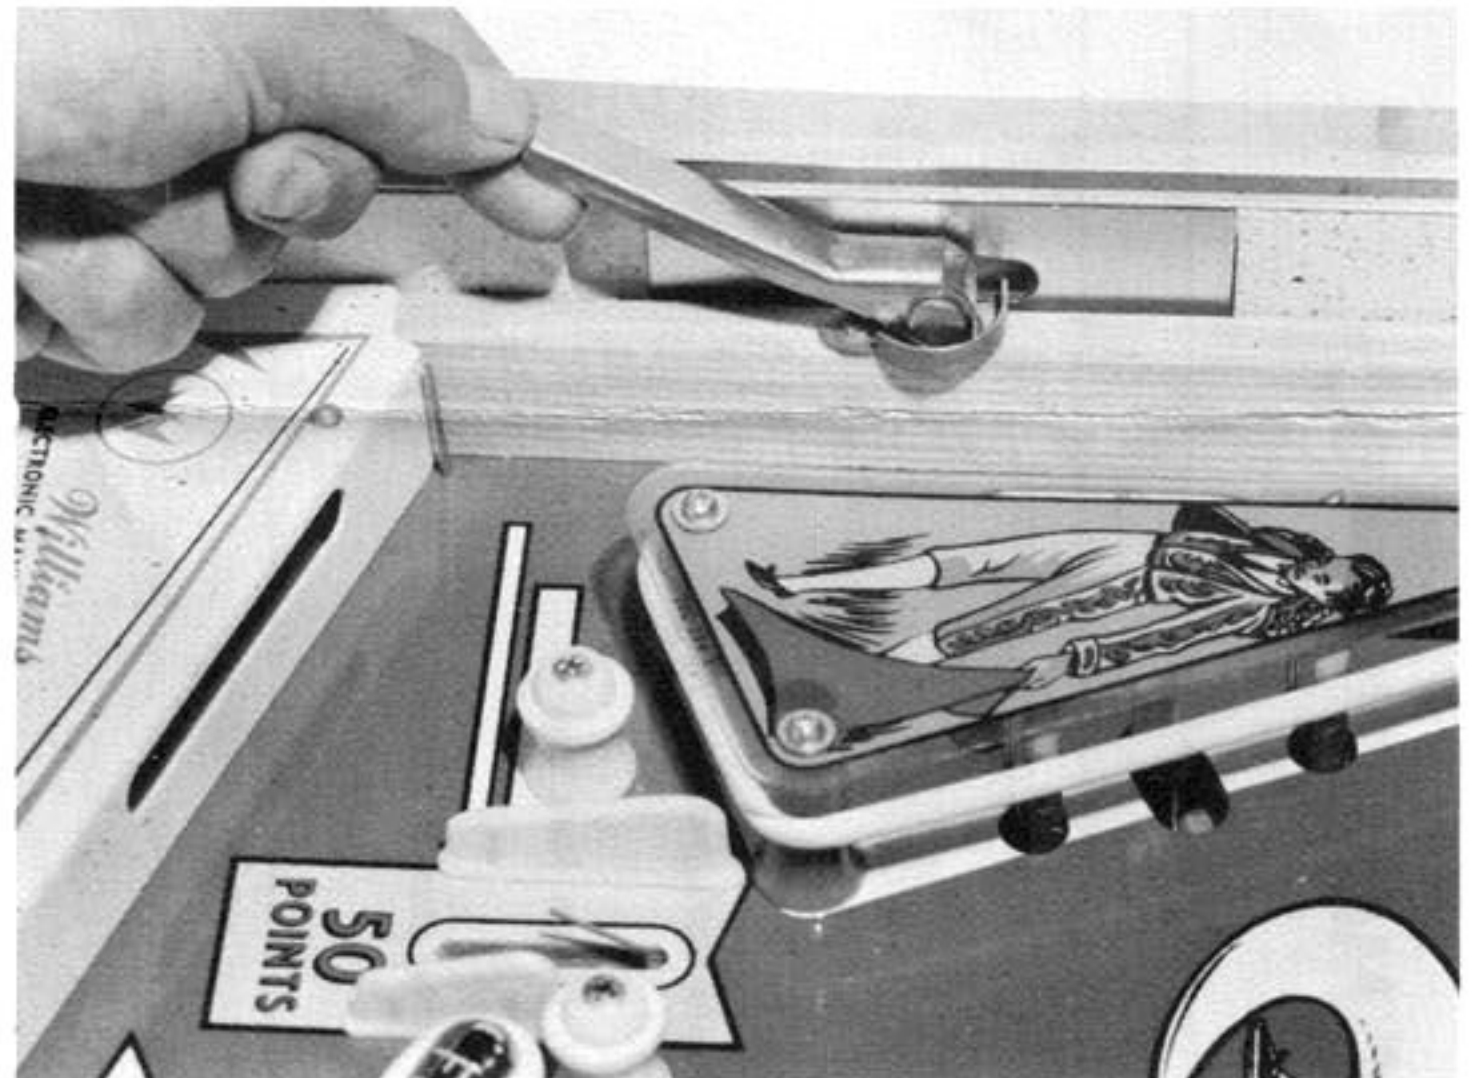

3. SWING HANDLES TOWARD CENTER OF PLAYBOARD. PLAYBOARD CAN NOW BE RAISED.

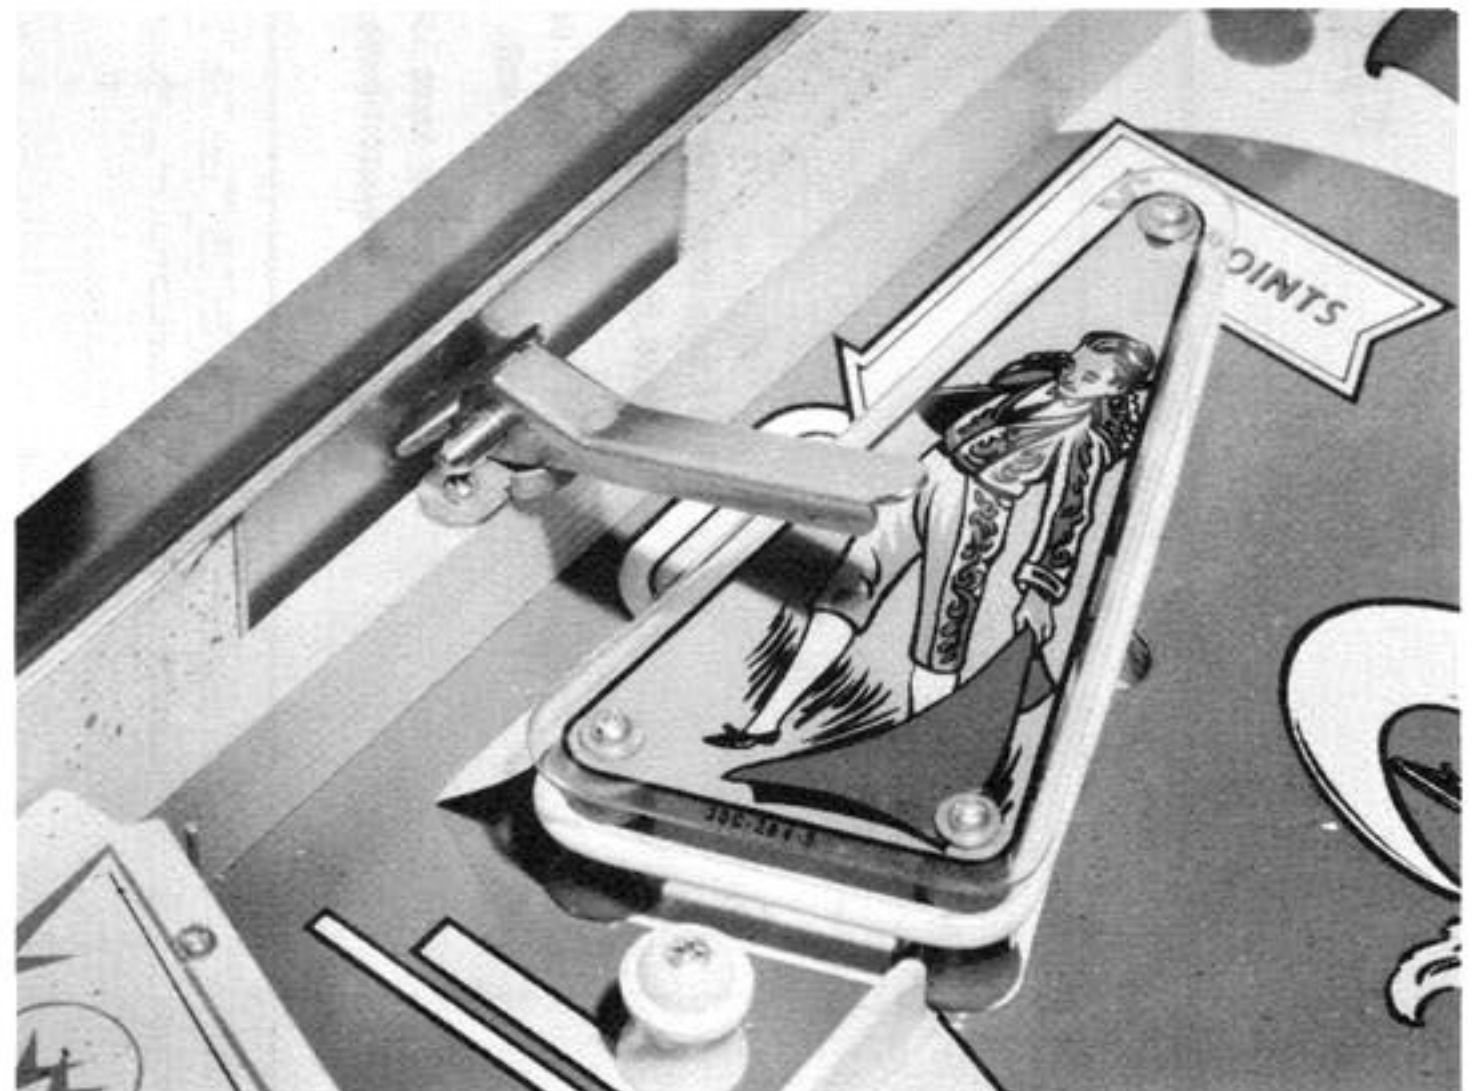

4. TO RELOCK, LOWER PLAYBOARD INTO CABINET. SLIDE PLAYBOARD TO FRONT OF CABINET AND REVERSE THE ABOVE PROCEDURE.